


### KEYPAD OVERVIEW

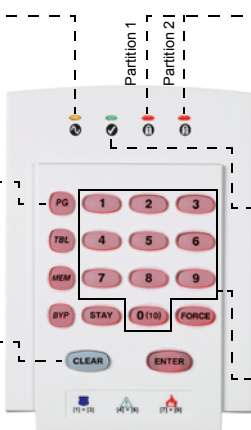
#### AC LIGHT

-  **On** = AC power on
- Off** = Power failure

Press and hold the **[PG]** key for 3-seconds to activate:



*(i.e. garage door, smoke reset, etc.)*

Made a mistake? - - - - -  
Press the **[CLEAR]** key to re-enter data, exit the current mode or cancel an action.




1686V LED Keypad

#### ARM LIGHTS

-  **On** = Partition armed
- Off** = Partition disarmed
-  **Flash** = Partition Stay armed
- Fast Flash** = Partition in alarm

#### READY LIGHT

-  **On** = All zones are closed
- Off** = Zone(s) open or armed
- Flash** = *Exit Delay* indicates that the system will become armed soon

- A numeric key illuminates if its corresponding zone is open.

### HOW TO ARM AND DISARM

#### TO ARM WHEN LEAVING...



**REGULAR:** Arms entire partition when all zones are closed.

Enter your **[ACCESS CODE]\*** (or press and hold the **[ENTER]†** key for 3 seconds).

**FORCE:** Arms entire partition without waiting for all zones to close.

Press the **[FORCE]** key, and then enter your **[ACCESS CODE]\*** (or press and hold the **[FORCE]†** key for 3 seconds).

#### TO ARM WHEN STAYING...



**STAY:** Arms partition's perimeter only, which allows you to remain in the protected area.

Press the **[STAY]** key, and then enter your **[ACCESS CODE]\*** (or press and hold the **[STAY]†** key for 3 seconds).

**INSTANT:** Stay arms partition, but an alarm will occur instantly if a zone opens, including entry delay zones.

After Stay arming, press and hold the **[STAY]†** key for 3 seconds.

#### Disarming

Enter your **[ACCESS CODE]\***.

\*If keys **[1]** and **[2]** flash, you must specify which partition you wish to arm or disarm by pressing the corresponding key.

†Must be enabled by your installer.

## PANIC ALARMS†

Press and hold one of the key combinations listed below for 2 seconds to activate a panic alarm.

Panic Alarm Type	Key Combinations
Police	Press and hold [1] & [3]
Medical	Press and hold [4] & [6]
Fire	Press and hold [7] & [9]

## ALARM MEMORY DISPLAY

When the [MEM] key is illuminated, an alarm has occurred within your system. Press the [MEM] key to view the breached zone(s). The breached zone's corresponding key will be illuminated.

## TROUBLE DISPLAY

When the [TBL] key is illuminated, press it to view the Trouble Display ([TBL] key flashes). Each key that is illuminated represents a separate trouble condition as shown below:

- |                                      |   |
|--------------------------------------|---|
| [1] Low/No battery                   | [8] Clock loss (press [8] to reprogram HH:MM)               |
| [2] Wireless transmitter low battery | [9] Tamper/Zone wiring failure (press [9] to view the zone) |
| [3] Power failure                    | [10] Telephone line monitoring failure                      |
| [4] Bell/PGM2 disconnected           | [STAY] Fire zone trouble                                    |
| [5] Bell current failure             | [BYP] Module loss   |
| [6] Auxiliary current failure        | [MEM] Wireless transmitter supervision loss                 |
| [7] Communication failure            | [FORCE] Keypad fault  |

## BYPASS PROGRAMMING

When the [BYP] key is illuminated, there are bypassed zones currently in your system.

### Method 1:

1. Press the [BYP] key.
2. Enter your [ACCESS CODE].
3. Press the keys corresponding to the zones you wish to bypass, or press [BYP] to recall the previously bypassed zones.
4. Press [ENTER].

### Method 2:

1. Press and hold the [BYP]† key for 3 seconds.
2. Go to step 3 in method 1.

## CHIME PROGRAMMING

Press and hold the numeric key corresponding to the zone for 3 seconds to enable or disable chiming for that zone\*.

Press and hold the [CLEAR] key for 3 seconds to enable or disable keypad muting\*.

\*A confirmation beep (BEEP-BEEP-BEEP-BEEP-BEEP) signifies that the feature has been enabled, and a rejection beep (BEEEEEEEEEEEEEP) sounds when the feature is disabled.

†Must be enabled by your installer.

© 2003 Paradox Security Systems. Spectra is a registered trademark of Paradox Security Systems.